

APPLICATION INSTRUCTIONS

For best results follow the instructions below to ensure maximum performance in all environments

Material Storage:

Ensure the material is kept in dry, warm conditions in the original protective packaging.

Surface Preparation:

A clean, dry surface is essential. Use an IPA cleaner to remove all surface contaminants (paint flakes, etc) – DO NOT use methylated spirits/petrol/lighter fluid, etc. as these leave behind a thin, greasy residue. Ensure prepared surface is above 10°C.






Porous Surface Sealing:

- Porous surfaces must be sealed prior to application to prevent water attacking the adhesive
- Toluene based primers are ideal
- · Apply a thin coat to the cleaned surface using a paint brush, then leave to dry

Tape Application:

- Peel back part of the release liner then press the adhesive firmly onto the prepared surface, and slowly keep peeling back the liner while applying the tape
- Try to ensure that the tape is not taut
- Once applied, press tape down firmly using even pressure (decorating rollers are excellent for this)
- We recommend sealing the edges using 'edge fix' as this will extend the life of the product
- Only use a small amount down the edges, a thin bead
- If correctly applied, the new anti-slip surface can be walked on instantly, you will get maximum benefit from the adhesive system after 48 hours

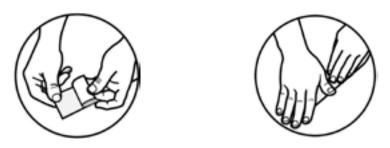

Zenith Safety Products^{MD} 22555 Aut. Transcanadienne, Senneville, H9X 3L7 info@zenithsafety.com www.zenithsafety.com